


MOUNTING INSTRUCTIONS


1. ALLOW MINIMUM OF 2" CLEARANCE BELOW COUNTERTOP SURFACE FOR PANEL WIRING.
2. USE THE TEMPLATE TO MARK THE CABINET.
3. CUT OUT THE ACCESS OPENING USING A 1/2" DIA. CUTTER (1/4" RADIUS), THEN DRILL PILOT HOLES FOR THE MOUNTING SCREWS.
4. MOUNT THE PLATE USING THE FOUR SUPPLIED #6 x 3/4" OVAL HEAD PHILIPS STAINLESS STEEL WOODSCREWS.
5. MOUNT THE ACCESSORY PANELS USING THE FOUR SUPPLIED 4-40 x 1/4" STAINLESS STEEL BUTTONHEAD CAP SCREWS.

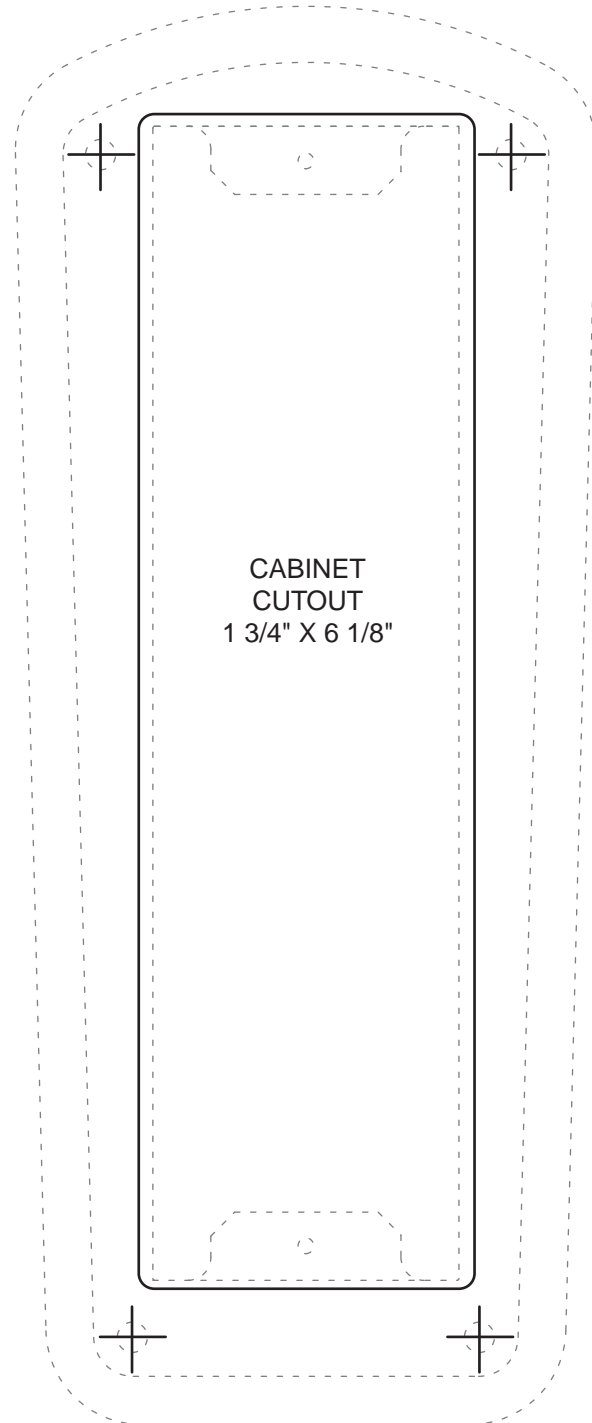


CABINET CUTOUT
 1 3/4" X 6 1/8"

80-1788-1
 SINGLE-POSITION CABINET PLATE CUTOUT AND FOUR SCREW HOLES (ACTUAL SIZE TEMPLATE)

PRE99-1197
 MIC CONTROL PANEL (ON/OFF/COUGH)

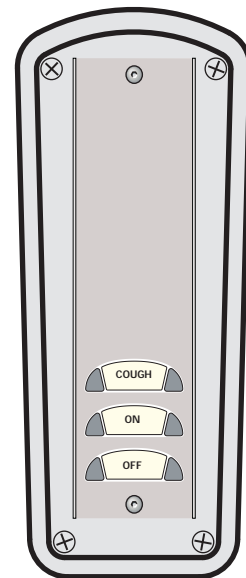

APPLICATION EXAMPLE SHOWING PANEL ORIENTATION

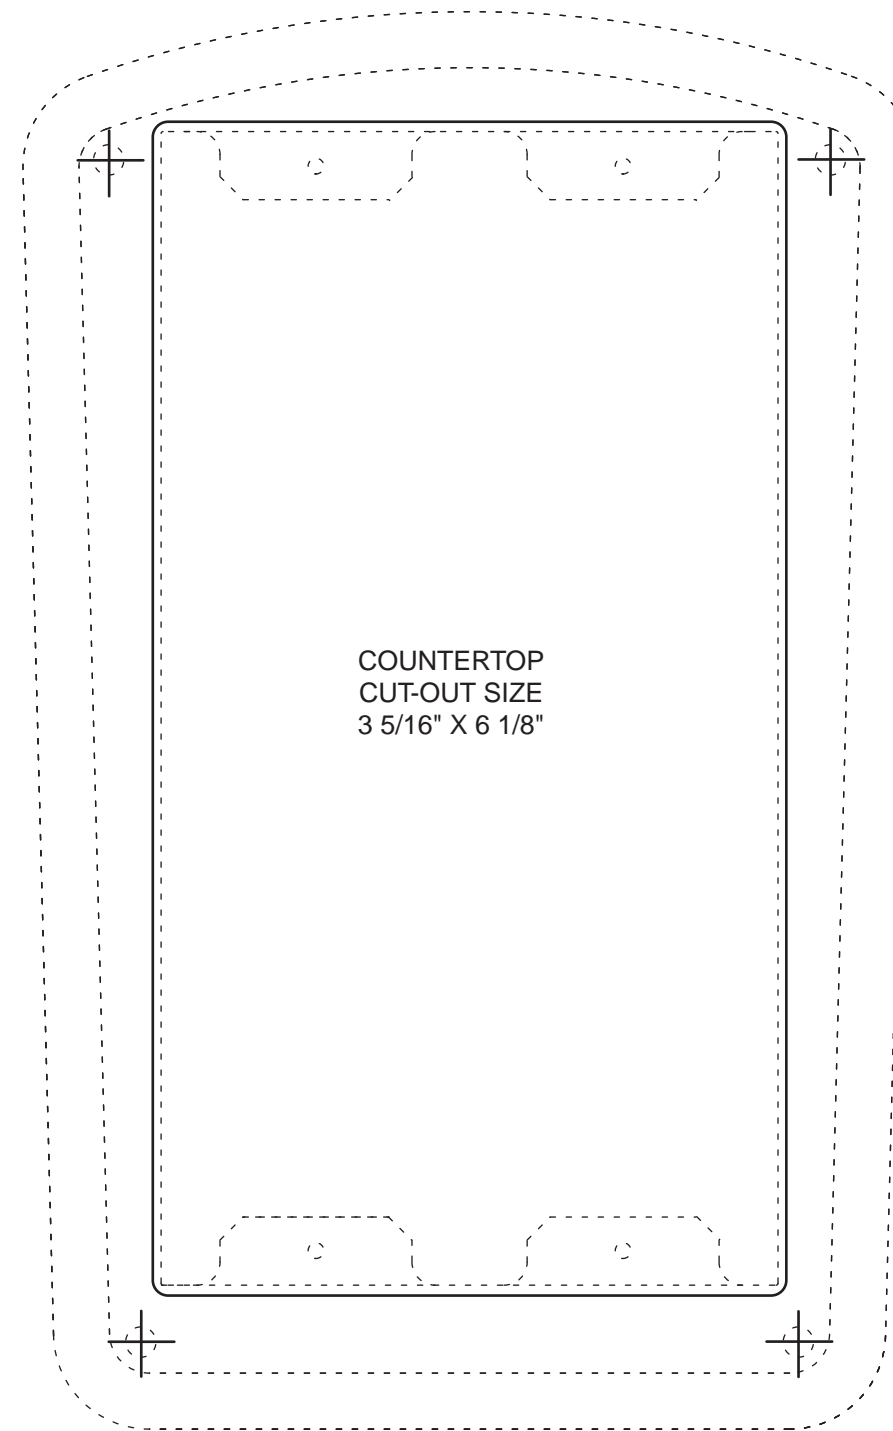


COUNTERTOP CUT-OUT SIZE
 3 5/16" X 6 1/8"


80-1788-2
 DUAL-POSITION CABINET PLATE CUTOUT AND FOUR SCREW HOLES (ACTUAL SIZE TEMPLATE)

PRE99-1198
 MIC CONTROL PANEL (ON/OFF/COUGH WITH TALKBACK)

PRE99-1191
 HEADPHONE FADER PANEL

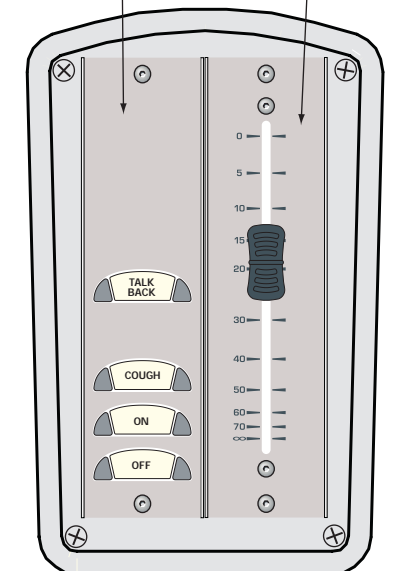

APPLICATION EXAMPLE SHOWING PANEL ORIENTATION

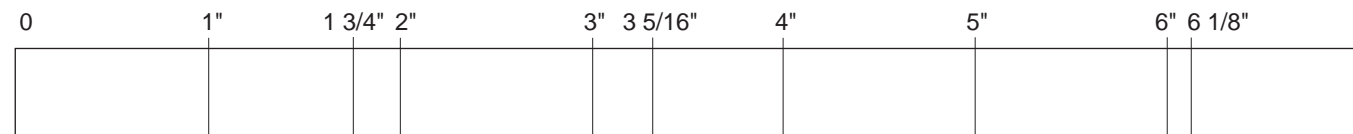

FULL SIZE SCALE